

Installation guide to run DSO6104L Oscilloscope

1. Download and Install "**IOLibSuite 18 1 23218**"
(Do not install the new BenchVue application even it asks to.)
2. Install "**BenchVue3.7 2016 11 22**"
3. Connect **DSO6104L** and **Launch BenchVue application.**
(switch off the updates)